



Modulating rotary actuator with fail-safe for ball valves and butterfly valves

- Torque motor 20 Nm
- Nominal voltage AC/DC 24 V
- Control modulating 0.5...10 V
- Position feedback 0.5...10 V
- Deenergised closed (NC)
- with 2 integrated auxiliary switches



Technical data

ectri	1	4-	
ectr	ca	Оð	ıta

Nominal voltage	AC/DC 24 V
Nominal voltage frequency	50/60 Hz
Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V
Power consumption in operation	5.5 W
Power consumption in rest position	3 W
Power consumption for wire sizing	8.5 VA
Auxiliary switch	2 x SPDT, 1 x 10% / 1 x 1190%
Switching capacity auxiliary switch	1 mA3 A (0.5 A inductive), AC 250 V
Connection supply / control	Cable 1 m, 4 x 0.75 mm ²
Connection auxiliary switch	Cable 1 m, 6 x 0.75 mm ²
Parallel operation	Yes (note the performance data)

Functional data

Torque motor	20 Nm
Torque fail-safe	20 Nm
Operating range Y	0.510 V
Input Impedance	100 kΩ
Position feedback U	0.510 V
Position feedback U note	Max. 0.5 mA
Position accuracy	±5%
Direction of motion motor	Y = 0 (0 V = A – AB = 0%)
Direction of motion fail-safe	Deenergised NC, valve closed (A – AB = 0%)
Manual override	by means of hand crank and locking switch
Running time motor	90 s / 90°
Running time fail-safe	<20 s @ -2050°C / <60 s @ -30°C
Sound power level, motor	45 dB(A)
Position indication	Mechanical
Service life	Min. 60'000 fail-safe positions

Safety data

Protection class IEC/EN	III, Safety Extra-Low Voltage (SELV)	
Power source UL	Class 2 Supply	
Protection class auxiliary switch IEC/EN	II, reinforced insulation	
Degree of protection IEC/EN	IP54	
Degree of protection NEMA/UL	NEMA 2	
Enclosure	UL Enclosure Type 2	
EMC	CE according to 2014/30/EU	
Low voltage directive	CE according to 2014/35/EU	
Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14	
UL Approval	cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1 The UL marking on the actuator depends on the production site, the device is UL-compliant in any case	



	Technical data sneet	SRF24A-5Z-52-5
Safety data	Mode of operation	Type 1.AA.B
	Rated impulse voltage supply / control	0.8 kV
	Rated impulse voltage auxiliary switch	2.5 kV
	Pollution degree	3
	Ambient humidity	Max. 95% RH, non-condensing
	Ambient temperature	-3050°C [-22122°F]
	Storage temperature	-4080°C [-40176°F]
	Servicing	maintenance-free
Mechanical data	Connection flange	F05
Weight	Weight	2.5 kg

Safety notes



- This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or
 aggressive gases interfere directly with the device and that it is ensured that the ambient
 conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- · Cables must not be removed from the device.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.
- The two switches integrated in the actuator are to be operated either on power supply voltage
 or at safety extra-low voltage. The combination power supply voltage/safety extra-low voltage
 is not permitted.

Product features

Mode of operation The actuator is connected with a standard control signal 0...10 V. The actuator moves the valve

to the operating position at the same time as tensioning the return spring. The valve is turned back to the fail-safe position by spring force when the supply voltage is interrupted.

Simple direct mounting Simple direct mounting on the rotary valve or butterfly valve with mounting flange. The

mounting orientation in relation to the fitting can be selected in 90° steps.

Manual override By using the hand crank the valve can be operated manually and engaged with the locking

switch at any position. Unlocking is carried out manually or automatically by applying the

operating voltage.

Adjustable angle of rotation Adjustable angle of rotation with mechanical end stops.

High functional reliability The actuator is overload protected, requires no limit switches and automatically stops when the

end stop is reached.

Flexible signalling The actuator has one auxiliary switch with a fixed setting and one adjustable auxiliary switch.

They permit a 10% or 11...90% angle of rotation to be signaled.

Electrical installation




Supply from isolating transformer.

Parallel connection of other actuators possible. Observe the performance data.



Wiring diagrams

AC/DC 24 V, modulating

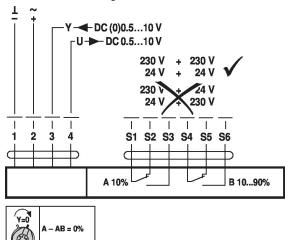

Cable colours:

1 = black

2 = red

3 = white

5 = orange

S1 = violet


S2 = red

S3 = white

S4 = orange S5 = pink

S6 = grey

Operating controls and indicators

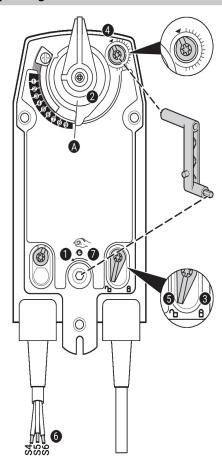

Auxiliary switch settings

A

Note: Perform settings on the actuator only in deenergised state.

For the auxiliary switch position settings, carry out points 1 to 7 successively.

Manual override

Turn the hand crank until the desired switching position is set.

2 Shaft clamp

Edge line A displays the desired switching position of the actuator on the scale.

3 Fasten the locking device

Turn the locking switch to the "Locked padlock" symbol.

4 Auxiliary switch

Turn rotary knob until the notch points to the arrow symbol.

5 Unlock the locking device

Turn the locking switch to the "Unlocked padlock" symbol or unlock with the hand crank.

6 Cable


Connect continuity tester to S4 + S5 or to S4 + S6.

Manual override

Turn the hand crank until the desired switching position is set and check whether the continuity tester shows the switching point.



Dimensions

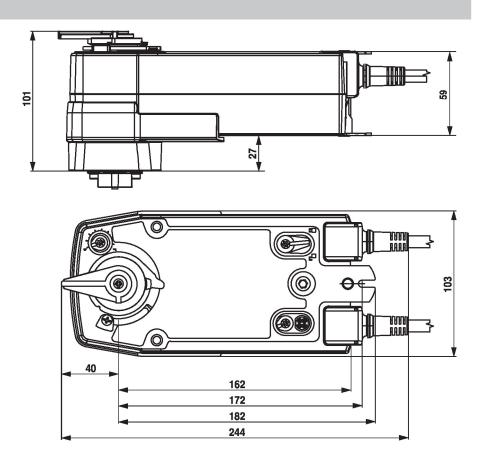

Further documentation

- The complete product range for water applications
- Data sheets for rotary valves and butterfly valves
- Installation instructions for actuators and/or rotary valves and butterfly valves
- General notes for project planning