

Globe valve actuator for 2-way and 3-way globe valves

- Actuating force 2500 N
- Nominal voltage AC/DC 24 V
- Control Open/close, 3-point
- Stroke 50 mm

Technical data sheet

RETRO FIT



| | a B | | |
|-----------------|--|--|--|
| Technical data | | | |
| Electrical data | Nominal voltage | AC/DC 24 V | |
| | Nominal voltage frequency | 50/60 Hz | |
| | Nominal voltage range | AC 19.228.8 V / DC 21.628.8 V | |
| | Power consumption in operation | 2.5 W | |
| | Power consumption in rest position | 0.5 W | |
| | Power consumption for wire sizing | 4.5 VA | |
| | Connection supply / control | Terminals 4 mm² (cable ø410 mm) | |
| | Parallel operation | Yes (note the performance data) | |
| Functional data | Actuating force motor | 2500 N | |
| | Manual override | with push-button, can be locked | |
| | Stroke | 50 mm | |
| | Running time motor | 150 s / 40 mm (188 s / 50 mm) | |
| | Sound power level, motor | 56 dB(A) | |
| | Position indication | Mechanical, 550 mm stroke | |
| Safety data | Protection class IEC/EN | III, Safety Extra-Low Voltage (SELV) | |
| | Power source UL | Class 2 Supply | |
| | Degree of protection IEC/EN | IP54 | |
| | Degree of protection NEMA/UL | NEMA 2 | |
| | Enclosure | UL Enclosure Type 2 | |
| | EMC | CE according to 2014/30/EU | |
| | Certification IEC/EN | IEC/EN 60730-1 and IEC/EN 60730-2-14 | |
| | UL Approval | cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1 The UL marking on the actuator depends on the production site, the device is UL-compliant in any case | |
| | Type of action | Type 1 | |
| | Rated impulse voltage supply / control | 0.8 kV | |
| | Pollution degree | 3 | |
| | Ambient humidity | Max. 95% RH, non-condensing | |
| | Ambient temperature | 050°C [32122°F] | |
| | Storage temperature | -4080°C [-40176°F] | |
| | Servicing | maintenance-free | |
| | | | |

3.2 kg

Weight Weight



Safety notes



- This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or
 aggressive gases interfere directly with the device and that it is ensured that the ambient
 conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The switch for changing the direction of motion and so the closing point may be adjusted only by authorised specialists. The direction of motion is critical, particularly in connection with frost protection circuits.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

Product features

Mounting on third-party valves

The RetroFIT actuators for installation on a wide range of valves from various manufacturers are comprised of an actuator, universal valve neck adapter and universal valve stem adapter. Adapt the valve neck and valve stem to begin with, then attach the RetroFIT actuator to the valve neck adapter, connect to the valve and start up. The valve neck adapter/actuator can be rotated by 360° on the valve neck, provided the size of the installed valve permits.

Mounting on Belimo valves

Use standard actuators from Belimo for mounting on Belimo globe valves.

Manual override

Home position

Manual override with push-button possible (the gear train is disengaged for as long as the button is pressed or remains locked).

The stroke can be adjusted by using a hexagon socket screw key (5 mm), which is inserted into the top of the actuator. The stem extends when the key is rotated clockwise.

High functional reliability

The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached.

Factory setting: Actuator stem is retracted.

Setting direction of motion

When actuated, the stroke direction switch changes the running direction in normal operation.

Restriction 3-point controller

It must be ensured that the pulsating 3-point controller stops when the end position is reached. If this is not possible on the system side, the multifunctional 24 V version of the actuator (..V24A-MP-..) must be used.

Accessories

| Electrical accessories | Description | Type S2A-H | |
|------------------------|---|---------------|--|
| | Auxiliary switch 2 x SPDT add-on | | |
| Mechanical accessories | Description | Туре | |
| | Spacer ring for Sauter, stroke 50 mm | ZRV-301 | |
| | Spacer ring for Siebe, stroke 50 mm | ZRV-302 | |
| | Spacer ring for Johnson Control, stroke 50 mm | ZRV-303 | |
| | Washer Sauter for Sauter, stroke 50 mm | ZRV-304 | |

Electrical installation





Supply from isolating transformer.


Parallel connection of other actuators possible. Observe the performance data. Direction of stroke switch factory setting: Actuator stem retracted (•).



Wiring diagrams

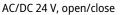


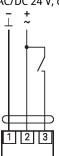

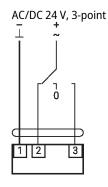

| 1 | 2 | 3 | | |
|----|-----|-----|----------|----------|
| | | _/_ | <u>¥</u> | * |
| | ~ | ~ | ₹ | * |
| _~ | _/_ | _/_ | stop | stop |
| ~ | _/_ | ~ | | ¥ |

Operating controls and indicators

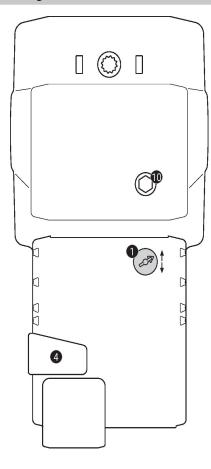

1 Direction of stroke switch

Switch over: Direction of stroke changes

4 Manual override button

Press button: Gear train disengages, motor stops, manual override possible


Release button: Gear train engages, standard mode

10 Manual override

Clockwise: Actuator stem extends
Counterclockwise: Actuator stem retracts



Dimensions

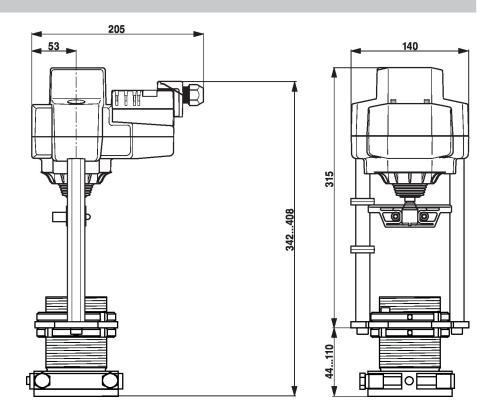

Further documentation

• Installation instructions for actuators