



# 3-point rotary actuator with fail-safe for ball valves

- Torque motor 5 Nm
- Nominal voltage AC 100...240 V
- Control 3-point
- Deenergised open (NO)
- with 2 integrated auxiliary switches



# **Technical data**

	lectr	ical	l de	st:
Е	ecu	ıca	uc	1LC

Nominal voltage	AC 100240 V
Nominal voltage frequency	50/60 Hz
Nominal voltage range	AC 85265 V
Power consumption in operation	5 W
Power consumption in rest position	3 W
Power consumption for wire sizing	16 VA
Auxiliary switch	2 x SPDT, 1 x 10% / 1 x 11100%
Switching capacity auxiliary switch	1 mA3 A (0.5 A inductive), DC 5 VAC 250 V
Connection supply / control	Cable 1 m, 4 x 0.75 mm <sup>2</sup>
Connection auxiliary switch	Cable 1 m, 6 x 0.75 mm <sup>2</sup>
Parallel operation	Yes (note the performance data)

## **Functional data**

Torque motor	5 Nm
Torque fail-safe	5 Nm
Direction of motion motor	Y = 0 (A – AB = 0%)
Direction of motion fail-safe	Deenergised NO, valve open (A – AB = 100%)
Manual override	No
Running time motor	35 s / 90°
Running time fail-safe	<20 s @ -2050°C / <60 s @ -30°C
Sound power level, motor	45 dB(A)
Position indication	Mechanical
Service life	Min. 60'000 fail-safe positions

# Safety data

Protection class IEC/EN	II, reinforced insulation
Protection class UL	II, reinforced insulation
Protection class auxiliary switch IEC/EN	II, reinforced insulation
Degree of protection IEC/EN	IP54
Degree of protection NEMA/UL	NEMA 2
Enclosure	UL Enclosure Type 2
EMC	CE according to 2014/30/EU
Low voltage directive	CE according to 2014/35/EU
Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14
UL Approval	cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1 The UL marking on the actuator depends on the production site, the device is UL-compliant in any case
Type of action	Type 1.AA.B
Rated impulse voltage supply / control	2.5 kV
Rated impulse voltage auxiliary switch	2.5 kV
Pollution degree	3
Ambient humidity	Max. 95% RH, non-condensing



Technical data sheet	NRFD230A-3-S2-O
Ambient temperature	-3050°C [-22122°F]
Storage temperature	-4080°C [-40176°F]
Servicing	maintenance-free

2.1 kg

## Safety notes



Safety data

Weight

Weight

- This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or
  aggressive gases interfere directly with the device and that it is ensured that the ambient
  conditions remain within the thresholds according to the data sheet at any time.
- Caution: Power supply voltage!
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- Cables must not be removed from the device.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

### **Product features**

**Mode of operation** The actuator moves the valve to the operating position at the same time as tensioning the

return spring. The valve is turned back to the fail-safe position by spring force when the supply

voltage is interrupted.

**Simple direct mounting** Simple direct mounting on the ball valve with only one screw. The mounting orientation in

relation to the ball valve can be selected in 90° steps.

**Adjustable angle of rotation** Adjustable angle of rotation with mechanical end stops.

High functional reliability The actuator is overload protected, requires no limit switches and automatically stops when the

end stop is reached.

Flexible signalling The actuator has one auxiliary switch with a fixed setting and one adjustable auxiliary switch.

They permit a 10% or 11...100% angle of rotation to be signaled.

## **Electrical installation**



Caution: Power supply voltage!

Parallel connection of other actuators possible. Observe the performance data.

#### Wire colours:

1 = blue

2 = brown

3 = white

4 = white S1 = violet

S2 = red

S3 = white


S4 = orange

S5 = pink


S6 = grey




## Wiring diagrams

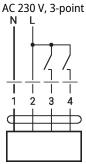

1	2	3	4	Y = 0	
	7		_/_	1	A - AB = 100%
	7	_~		$\bigcirc$ 0	A - AB = 0%
_~	7	_/_	_/_	stop	stop
_~_		_/_	_~_	$\bigcirc$ 0	A - AB = 0%

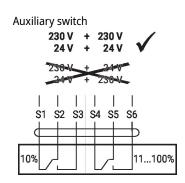

# Operating controls and indicators

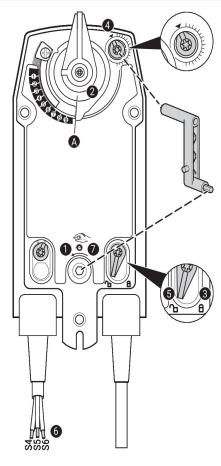

## **Auxiliary switch settings**



**Note:** Perform settings on the actuator only in deenergised state.

For the auxiliary switch position settings, carry out points 1 to 2 successively.

Manual override

Turn the hand crank until the desired switching position is set.

2 Shaft clamp

Edge line A displays the desired switching position of the actuator on the scale.

3 Fasten the locking device

Turn the locking switch to the "Locked padlock" symbol.

4 Auxiliary switch

Turn rotary knob until the notch points to the arrow symbol.

Unlock the locking device

Turn the locking switch to the "Unlocked padlock" symbol or unlock with the hand crank.

6 Cable


Connect continuity tester to S4 + S5 or to S4 + S6.

**Manual override** 

Turn the hand crank until the desired switching position is set and check whether the continuity tester shows the switching point.



# **Dimensions**

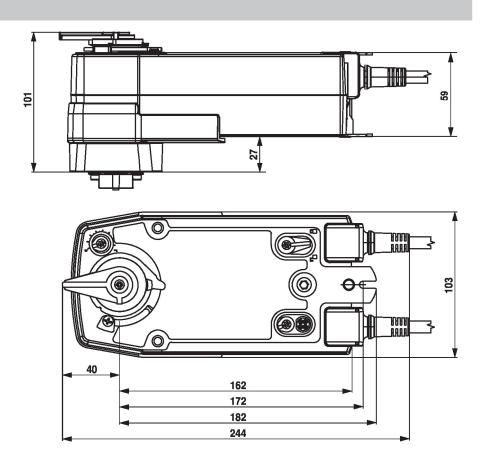

# **Further documentation**

- The complete product range for water applications
- Data sheets for ball valves
- Installation instructions for actuators and/or ball valves
- General notes for project planning